



RALLY SAFETY SYSTEM



OVERVIEW

BATTERY STATUS

- EXTERNAL POWER
- NO EXTERNAL POWER
- (BLINKING) INT. BATTERY EMPTY

RADIO STATUS

- RADIO OK
- SLEEP MODE, NO RADIO

OVERTAKE FUNCTION

DANGER BEACON



EMERGENCY SOS BEACON

- PRESS AND HOLD UNTIL ACTIVATED

CONFIRM / QUIT BUTTON